

The following list details all error codes, and their associated classifications, for all Panther products.

Error Code	Description	Classification	Classification Legend
0	No Errors Detected		W - Warning
1	Low Ribbon	W	C - Consumables
2	Low Label	W	E - External
3	Printer Error	P	S - System
4	Ribbon Out	C	P - Printer
5	Label Out	C	
6	No Printer Power	P	
7	No Printer Selected	S	
8	Applicator Not Home	S	
9	Printing While Not Home	S	
10	Product Early	E	
11	N/A		
12	Product Jam	E	
13	N/A		
14	Maximum Bad Scans Reached	S	
15	No Applicator Movement	S	
16	Printer Offline/No Data	E	
17	Batch Data Error	S	
18	Print Request with Label on Head	S	
19	No Printer Response	P	
20	No Scanner Response	S	
21	N/A		
22	No Label On Head (LOTAR)	S	
23	Label Still On Head (LOTAR)	S	
24	No Servo Response - Predator	S	
25	Servo Alarm - Predator	S	
26	N/A		
27	Bypass Warning	W	
28	No Swing Arm Application Selected	S	
29	Height Sensor Disconnected	S	
30	N/A		
31	No Height Reading from Sensor	S	
32	N/A		
33	Invalid Height Recived from Host	E	
34	No Height Received from Host	E	
35	Fold Note Home	S	
36	Fold While Applying	S	
37	Printing While Fold Not Home	S	
38	Servo Communication Error	S	